

Manual Set Up Analogue Dahua

Stream via RTSP url

rtsp://<address>:<port>/cam/realmonitor?channel=<#> & subtype=<#>

Where:

<address> is the IP address of your DVR

<port> is the RTSP port of the camera. By default should be 554 but can be confirmed at the DVR menu at the [configuration] – [Network] – [Basic Settings]

<#> refers to the channel number and stream type of the camera. For example, a “channel=1&subtype=0” refers to channel #1 using the main stream.

It is also needed to fill the Username & Password of the DVR. It is very important to keep the format mentioned without any change (Capital letters etc.)

Examples below.

Main Stream

rtsp://192.168.1.100:554/cam/realmonitor?channel=1&subtype=0

Sub Stream

rtsp://192.168.1.100:554/cam/realmonitor?channel=1&subtype=1

Snapshot via HTTP URL

http://<address>:<httpport>/cgi-bin/snapshot.cgi?Channel= < # >

Where:

<address> is the IP address of your DVR

<port> is the RTSP port of the camera. By default should be 80 or 8000 but can be confirmed at the DVR menu at the [configuration] – [Network] – [Basic Settings]

<#> refers to the channel number of the camera

It is also needed to fill the Username & Password of the DVR. It is very important to keep the format mentioned without any change (Capital letters etc.)

Examples below.

Cam 1

http://192.168.1.100:80/cgi-bin/snapshot.cgi?Channel=<1>

Cam 2

rtsp://192.168.1.100:80/cgi-bin/snapshot.cgi?Channel=<2>