MONITOREAL

ZEUS SERIES
QUICK START GUIDE



See what matters.

monitoreal.com

Contents

Before you begin **1**

Know your device **1**

- Zeus Home 1
- Zeus Lite 2

Connect and configure **3**

Optional: Telegram bot notifications **4**

Safety and support **4**


About this guide. This Quick Start Guide applies to both Monitoreal Zeus Home and Monitoreal Zeus Lite. Unless a model is named specifically, the setup steps are the same for both devices.

Before you begin

You will need a wired network connection with a DHCP-enabled router, a power outlet, and Monitoreal cameras or ONVIF-compatible cameras. Use the power adapter supplied with your device. Check your product packaging for included accessories.

Know your device

Zeus Home

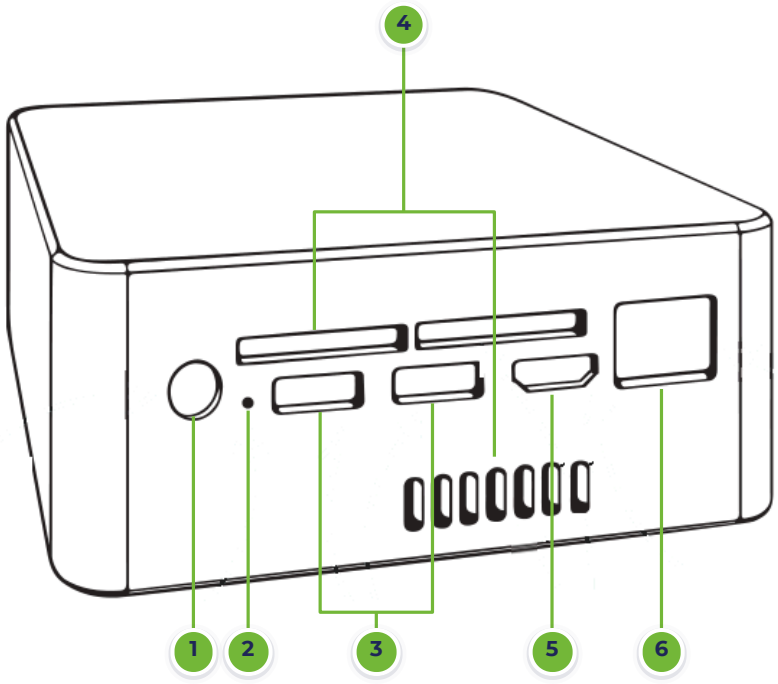


⚠ Do not block the fan grille. If placing the device on its side, ensure the side with the grille faces upward.

Port legend:

1. Power AC adapter connector
2. Reset button
3. USB ports
4. Fan grilles
5. HDMI (Zeus Home only)
6. Ethernet (RJ-45)

Zeus Lite

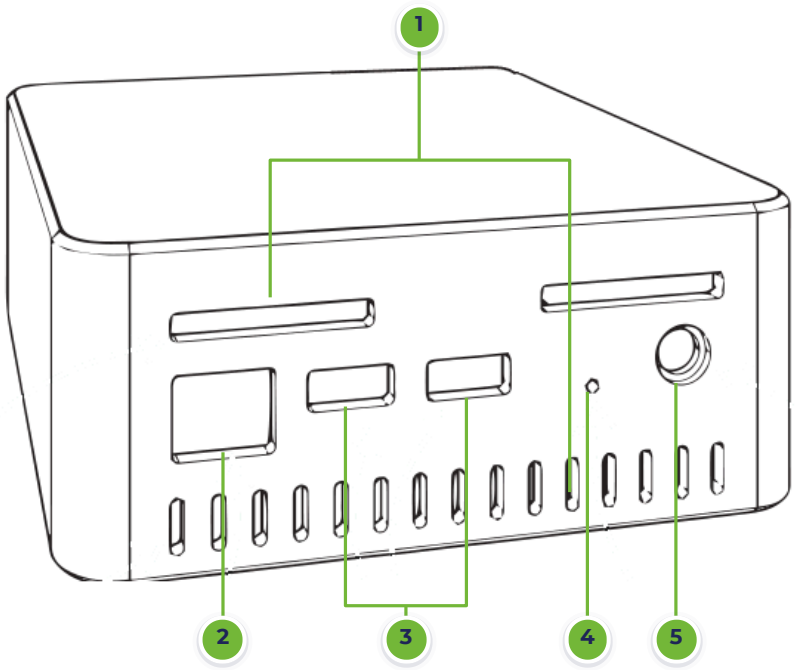

⚠ Do not block the fan grille. If placing the device on its side, ensure the side with the grille faces upward.

Port legend:

1. Fan grille
2. Ethernet (RJ-45)
3. USB ports
4. Reset button
5. DC power connector

Connect and configure

1. **Connect to your network.** Connect the device to your DHCP router using an Ethernet cable.
2. **Connect power.** Connect the supplied power adapter and switch on the device.
3. **Wait for initialization.** Allow approximately 1–2 minutes for the device to start. Read the IP address shown on the device's LED display.
4. **Open the web interface.** On a computer connected to the same network, open a web browser and enter **http://<device IP address>/**.
5. **Sign in.** Use the default username **smartview** and password **smartview**. You will be required to change these credentials after your first login.
6. **Add cameras.** Select Camera Search to discover ONVIF cameras and enter their camera access credentials, or add cameras manually.
7. **Configure detection.** Review and adjust object-detection rules in the web interface. Your device is ready to use; Telegram notifications are optional.

Zeus Home includes an HDMI port. This connection is specific to Zeus Home; HDMI is not required for the setup steps above. Refer to your device's port labels when connecting cables.

Optional: Telegram bot notifications

Set up Telegram only if you wish to receive notifications through a Telegram bot. It is not required to start using your Monitoreal device.

1. Install and open Telegram on your computer or phone.
2. Find the official BotFather account and send **/newbot**.
3. Follow its instructions to name your bot and obtain a bot token.
4. In the Monitoreal web interface, open **Settings > Notifications**, paste the bot token, set **Proxy: No**, and save.
5. Open the bot using the link provided by BotFather and send **/start**.
6. When prompted, enter your Monitoreal web-interface username and your current password (the one set after first login).

Safety and support

For indoor use only. Keep ventilation grilles unobstructed; if placing the device on its side, ensure the vented side faces upward. Keep away from heat sources, protect the power cord, handle with care, and clean using a dry or slightly damp soft cloth. Do not exceed the device's rated power input.

Support: mrsupport@monitoreal.com or Request Support Form

MONITOREAL

Support and contacts

TECHNICAL SUPPORT FORM

Monitoreal Support

WEBSITE

monitoreal.com

See what matters.

Specifications are subject to be changed without notice. © Monitoreal Ltd.